

2. RS232 control

- 1) It supports RS232 control to select the input and output channel, the baud rate is 9600, and the connector is a 9-pin terminal post.
- 2) Use the serial port software, please set COM firstly, and then correspond to the following figure in the various channel commands.

instruction list													
HDMI output	HDMI input 1	HDMI input 2	HDMI input 3	HDMI input 4									
HDMI output 1	PS11R	PS12R	PS13R	PS14R									
HDMI output 2	PS21R	PS22R	PS23R	PS24R									
HDMI output 1 HDMI output 2	PA1R	PA2R	PA3R	PA4R									
Change all output/input states	PAP1P2R, Output 1 selects signal source P1 Output 2 selects signal source P2												
Gets the current output / input state	PA?R												
Command return	All of the above commands, if they were sent successfully, the output status will be returned accordingly For example, send command " PA? R " Return OK + <table border="0"><tr><td>1</td><td>2</td><td></td></tr><tr><td> </td><td> </td><td>output 2 selects input 2</td></tr><tr><td>└──┘</td><td></td><td>output 1 selects input 1</td></tr></table> If the instruction is wrong, err is returned				1	2				output 2 selects input 2	└──┘		output 1 selects input 1
1	2												
		output 2 selects input 2											
└──┘		output 1 selects input 1											

• FAQ

Q: No video/audio signal output on the displays?

- A: 1) Please check and make sure the Matrix Switch is connected well and powered on.
- 2) Please check and make sure all HDMI cables are connected well
 - 3) Please check and make sure the input channel of displays are correct.

Q: Picture quality is not fluent and stable ?

- A: 1) Please check and make sure all HDMI cables are connected well.
- 2) Try to connect the source device to display device directly, or change to another source device for a try to see the picture quality.
 - 3) Please use high quality HDMI2.0 standard cable when HDMI 4Kx2K signal input.


• Specification

Items	Specification
HDMI signal	HDMI2.0, Full compatible with HDCP2.2
Inputs	4 HDMI
Outputs	2 HDMI
Transmission rate	18Gbps
Support resolution	480i@60Hz, 480p@60Hz, 576i@50Hz, 576p@50Hz, 720p@50/60Hz, 1080i@50/60Hz, 1080p@50/60Hz, 4Kx2K@25/30/60Hz/3D
Support audio format	DTS-HD/Dolby-true HD/LPCM7.1/DTS/Dolby-AC3/DSD
YUV	4:4:4
Video signal	0.5~ 1.5Vp-p(TM DS)
DDC signal	5Vp-p(TTL)
Video bandwidth	600MHZ
HDMI port	Type A 19 pin, female
RS232	9 pin serial port seat
Working temperature	0°C ~ 60°C
Working Humidity	0 ~ 90% (no condensation)
Power supply	DC12V/2A
Power consumption	15W(Max)
Product dimension	283.50(L)X164.75(W)X27.20(H)mm
Weight	1.15Kg
Color	Black

4x2 HDMI Matrix Switch

User Manual

4Kx2K
60Hz

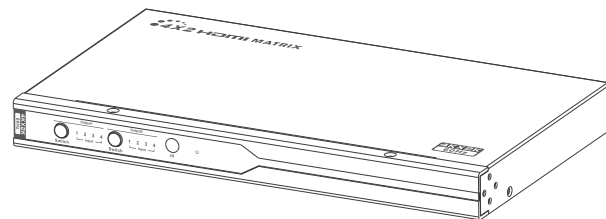

Disclaimer

The product name and brand name may be registered trademark of related manufacturers. TM and ® may be omitted on the user manual. The pictures on the user manual are just for reference, and there may be some slight difference with the real products. We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.

Thank you for purchasing this product. For optimum performance and safety, please read the instructions carefully and keep the manual for future reference.

• Important Safety Notice

Please read below safety instructions carefully before installation and operation:

- * Please pay attention to all the warnings and hints on this device.
- * Do not expose this unit to rain, moisture and liquid.
- * Do not put any stuff into the device.
- * Do not repair the device or open the enclosure without professional person guidance to avoid electronic shock.
- * Make sure good ventilation openings to avoid product overheating damage.
- * Turn off power and make sure environment is safe before installation.
- * Do not plug-in/out the connection cables when it is in using to avoid cables damage.
- * Use DC12V/2A power adapter. Make sure the specification matched if using 3rd party DC adapters.


• Introduction

This product is a 4×2 HDMI2.0 Matrix Switch, supports resolution up to 4K×2K@60Hz, with 4 HDMI inputs and 2 HDMI outputs. 4 HDMI inputs accommodate the simultaneous connection up to 4 high definition video sources, such as satellite systems and Blu-ray players. 2 HDMI outputs send the high definition A/V signals to 2 ultra HD displays. This Matrix Switch supports IR remote control, button control and RS232 for switching inputs and outputs. This product is perfect for security system, digital monitoring system, school education system, exhibition center, multimedia conference, command system etc.

• Features

1. Support 4 way HDMI signal input, switching or distributing to 2 display devices that support HDMI signal input.
2. Supports up to ultra HD resolution 4K×2K@60Hz.
3. Transmission data rate up to 18Gbps.
4. Pure hardware design, plug and play.
5. Support IR remote and button control for switching inputs/outputs.
6. Support RS232 control.
7. Supports YUV 4:4:4.
8. Support 3D.

• Package Contents



Matrix Switch unit ×1pcs



DC12V2A power adapter ×1pcs



User manual ×1pcs



Remote Controller ×1pcs




Wall-mount kit ×2pcs

• Installation Requirement

1. HDMI source device (DVD, PS3, Set top box, PC etc)
2. HDMI display device like SDTV, HDTV, and projector with HDMI port.


• Panel Description

Front Panel

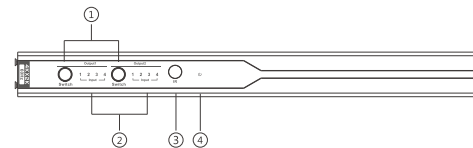

① Output button	To choose output channel
② Input select indicator	Display corresponding output channel
③ IR receiver window	Receive IR signal
④ Power indicator	LED indicator turn on when power on

Back Panel



① Power input	Connect with DC12V/2A power adapter
② RS232	RS232 control
③ HDMI input	Connect with HDMI source device
④ HDMI output	Connect with HDMI display device


• Remote Controller

This remote controller is just used for inputs or outputs switched/selected.



• Connections

1. Connection Drawing

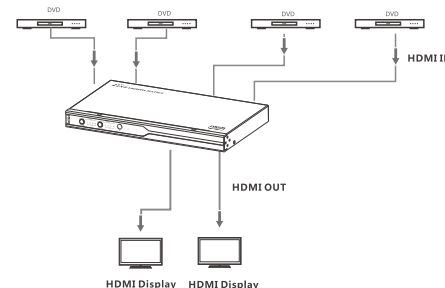

- 1) Connect all your HDMI source devices to this product's inputs via HDMI cables.
- 2) Connect up to the HD display devices on the HDMI outputs via HDMI cables.
- 3) Power on all source device, this Matrix Switch and display device, then it works.
- 4) Select/switch inputs and outputs via IR remote , buttons or RS232 command.